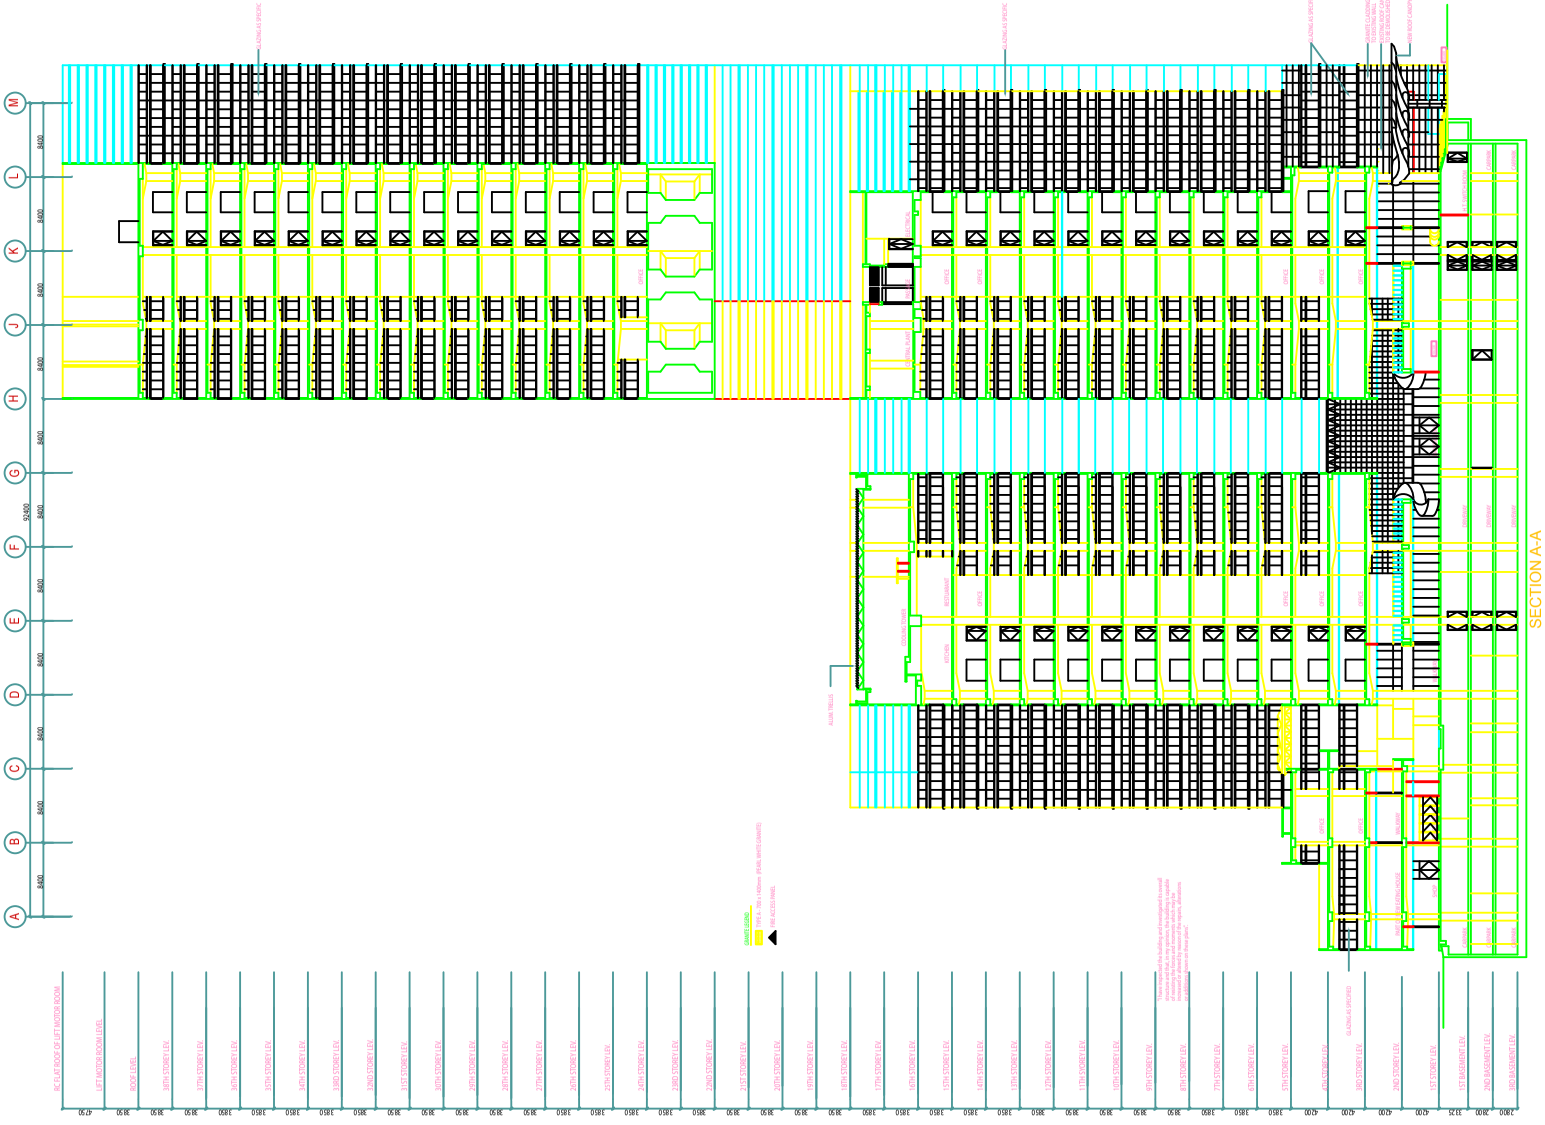
SECTION A-A
ROOF LEVEL
LIFT MOTOR ROOM LEVEL
38TH STOREY LEV
37TH STOREY LEV
36TH STOREY LEV
35TH STOREY LEV
34TH STOREY LEV
33RD STOREY LEV
32ND STOREY LEV
31ST STOREY LEV
30TH STOREY LEV
29TH STOREY LEV
28TH STOREY LEV
27TH STOREY LEV
26TH STOREY LEV
25TH STOREY LEV
24TH STOREY LEV
23RD STOREY LEV
22ND STOREY LEV
21ST STOREY LEV
20TH STOREY LEV
19TH STOREY LEV
18TH STOREY LEV
17TH STOREY LEV
16TH STOREY LEV
15TH STOREY LEV
14TH STOREY LEV
13TH STOREY LEV
12TH STOREY LEV
11TH STOREY LEV
10TH STOREY LEV
9TH STOREY LEV
8TH STOREY LEV
7TH STOREY LEV
6TH STOREY LEV
5TH STOREY LEV
4TH STOREY LEV
3RD STOREY LEV
2ND STOREY LEV
1ST STOREY LEV
1ST BASEMENT LEV
2ND BASEMENT LEV
3RD BASEMENT LEV
A
B
C
D
E
F
G
H
J
K
L
M
8400
52400
4250
8850
3850
3850
3